FOLDING ADIRONDACK CHAIR ASSEMBLY INSTRUCTIONS

It takes just 8 bolts and the allen key provided to assemble your new folding Adirondack chair. The only extra tool you need is an 11mm spanner (not provided). It is important not to completely tighten any bolts until all pieces are assembled.



Included in the box	
A: Seat	E: Hardware
B: Chair Back	Bolts x 8
C: Front Legs	Washers x 16
D: Arms x 2	Nuts x 8
	Allen Key x 1



HANDY TIP 1: Lay out the nuts and bolts like the picture. It helps to thread a washer onto each bolt before you start. That way you won't forget them when you insert the bolts.

HANDY TIP 2: Locking nuts, by definition, can be harder to tighten. We've found that by dipping the end of each bolt into a little WD40 before threading through the holes, the nuts turn more smoothly when securing. One quick dip is all that's needed, almost like dipping a biscuit into tea!!

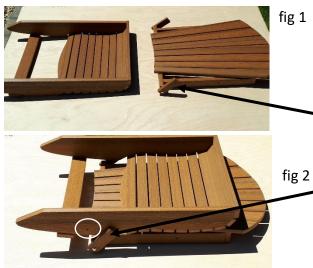


fig 1

STEP 1 ATTACH SEAT (A) TO CHAIR BACK (B)

Lay seat (A) and chair back (B) on the ground as shown in fig1

Then place seat (A) over the top of (B) as shown in fig 2

Rotate hinges on (A) upwards towards corresponding holes on (B)

Once holes are completely aligned, thread 1 x bolt, with pre-attached washer through the hole, thread a second washer and secure bolt with 1 x nut. Do for both sides. Only tighten the nuts finger tight at this time.



STEP 2 ATTACH FRONT LEGS (C) TO SEAT (A)

Lay front legs (C) on the ground as shown in fig 3.

Note the position/direction of the feet.

Then place front legs (C) over the top of (A) and align the corresponding holes as shown in fig 4

Once holes are completely aligned, thread 1 x bolt, with pre-attached washer through the hole, thread a second washer and secure bolt with 1 x nut. Do for both sides. Only tighten the nuts finger tight at this time.



Now that your assembly looks like fig 5, you need to open the chair so that it rests on its front legs and the chair back is flat on the floor, as in fig 6



fig 5

fig 6



fig 7

fig 4

STEP 3 ATTACH ARMS (D) TO FRONT LEGS (C)

Lay arms (D) on the ground as shown in fig 7. Note the position of left and right arms.

Attach the FRONT of the arms to the front legs by threading 1 x bolt, with pre-attached washer through the corresponding holes, thread a second washer and secure bolt with 1 x nut. As shown in fig 8. Do for both sides.



fig 8

Only tighten the nuts finger tight at this time.

Now lift the seat back upwards and align the corresponding holes on the BACK of the arms. Once holes are aligned, thread 1 x bolt, with pre-attached washer through the corresponding hole, thread a second washer and secure bolt **finger tight** with 1 x nut. Do for both sides.

Now tighten all 8 bolts using the allen key provided and an 11mm spanner

Try not to over tighten the bolts, as this will make the chair harder to fold and unfold.

Your chair is now ready to enjoy!



If at any time during the folding and unfolding process, the bottom part of the chair back gets caught on the lower crossbar, like in fig 9 & 10. Simply grab the back of the chair as in fig 11 and using an upward movement, lift it clear of the crossbar and then you can push it forward into its correct position as in fig 12

However, once our chairs are positioned where you want them in your garden, you will not have to move them around as they can stay outside all year, whatever the weather!

We hope you enjoy our maintenance free, eco-friendly Adirondack chairs for many years to come.

Any comments or queries, call 01531 670104 or email sales@luxwoodpatio.com

Thank you for choosing LuxWoodPatio for your new garden chairs.

Meryl & Tony Edwards-Geary

